

# SERVICE MANUAL

---

## DAIHATSU

---

# L500, L501

### FOREWORD

This manual is a service manual for model L500, L501.

In this service manual, the entire portion is divided into 21 sections. Each section has an index along with a table of contents in the beginning.

All information used in this service manual was in effect at the time when the manual was printed. However, the specifications and procedures may be revised owing to continuing improvements in the design without advance notice and without incurring any obligation to us.

Published in January, 1995

DAIHATSU MOTOR CO., LTD

© 1995 DAIHATSU MOTOR CO., LTD

9198-LE

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Daihatsu Motor Co., Ltd.

LG100000-00000

# DAIHATSU L500, L501

## Service manual

### SECTION INDEX

NAME	SECTION
GENERAL INFORMATION	GI
MAINTENANCE	MA
ENGINE MECHANICAL	EM
EMISSION CONTROL	EC
EFI SYSTEM	EF
FUEL SYSTEM	FU
COOLING SYSTEM	CO
LUBRICATION SYSTEM	LU
IGNITION SYSTEM	IG
STARTING SYSTEM	ST
CHARGING SYSTEM	CH
CLUTCH	CL
MANUAL TRANSMISSION	MT
AUTOMATIC TRANSMISSION	AT
FRONT AXLE & SUSPENSION	FS
REAR AXLE & SUSPENSION	RS
BRAKE	BR
STEERING	SR
BODY	BO
BODY ELECTRICAL	BE
HARNESS & WIRING DIAGRAM	HW